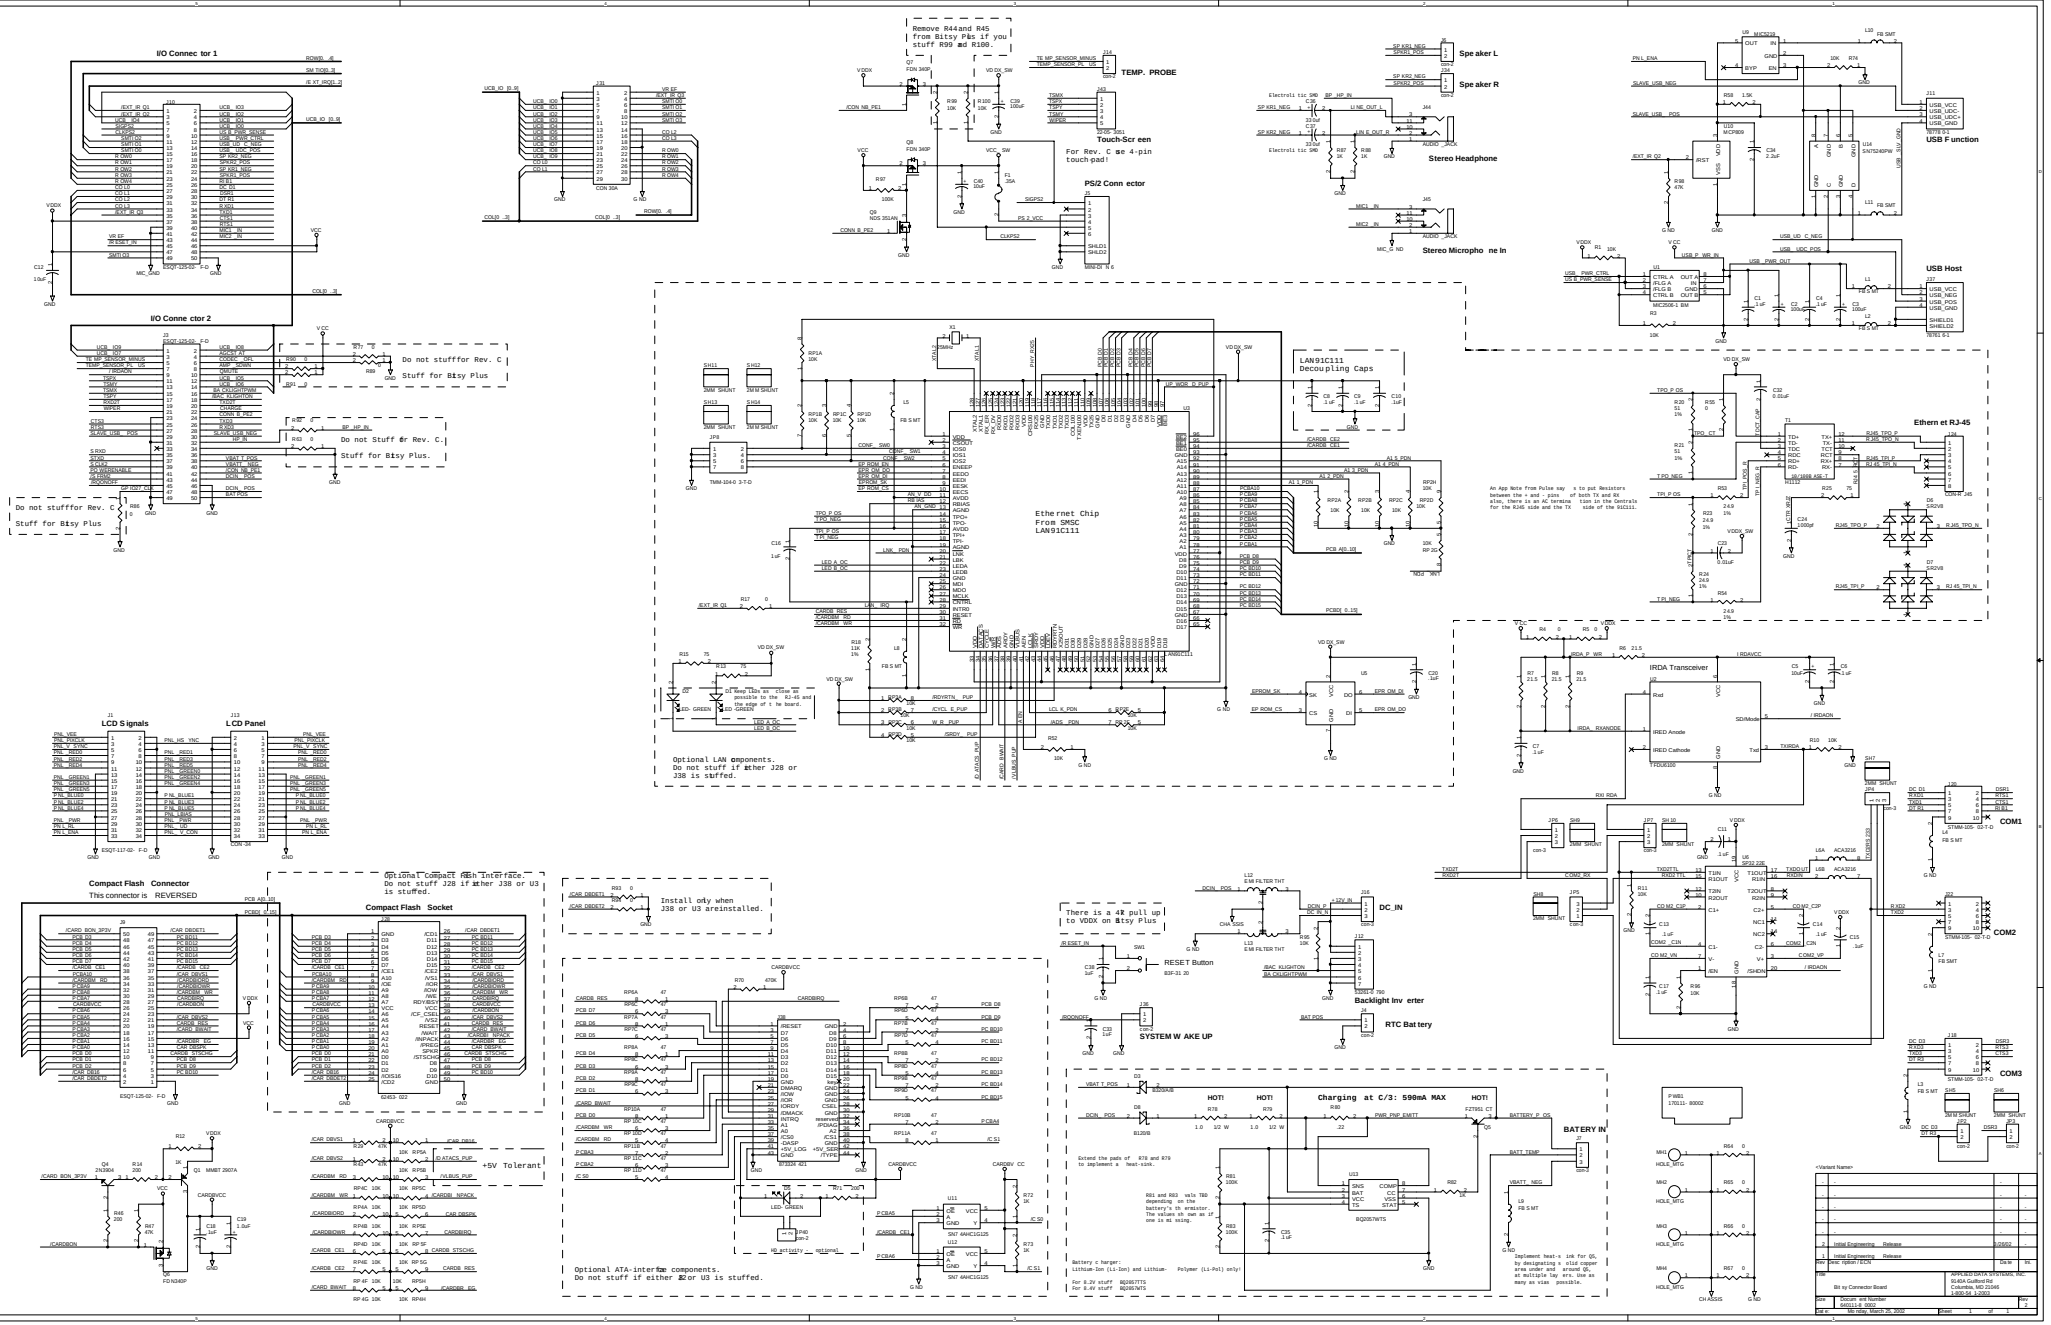
I/O Connec tor 1
I/O Conne ctor 2
Do not stufffor Rev. C
Stuff for Bisy Plus
Do not stuff Rev. C
Stuff for Bisy Plus.
Do not stuff Rev. C.
Stuff for Bisy Plus.
Remove R44and R45 from Bitsy Plus if you stuff R99 and R100.
TEMP. PROBE
Touch-Scr een
For Rev. C use 4-pin touch pad!
PS/2 Conn ector
Spe aker L
Spe aker R
Stereo Headphone
Stereo Microphone In
USB F unction
USB Host
Ethern et RJ-45
LAN91C111 Decoupling Caps
Ethernet Chip From SMSC LAN91C111
Optional LAN components. Do not stuff if either J28 or J38 is stuffed.
IRDA Transceiver
LCD Signals
LCD Panel
Compact Flash Connector
This connector is REVERSED
Optional compact flash interface. Do not stuff J28 if either J38 or U3 is stuffed.
Compact Flash Socket
Install only when J38 or U3 areinstalled.
+5V Tolerant
Optional ATA-interface components. Do not stuff if either J28 or U3 is stuffed.
There is a 47K pull up to VDDX on Bitsy Plus
RESET Button
DC_IN
Backlight Inv erter
SYSTEM W AKE UP
RTC Battery
BATERY IN
Charging at C/3: 590mA MAX
HOT!
COM1
COM2
COM3
USB F unction
USB Host
Ethern et RJ-45
IRDA Transceiver
APPLIED DATA SYSTEMS, INC.
9140A Guilford Rd
Columbia, MD 21046
1-800-54 1-2007
Bit sy Connector Board
Date: Mo nday, March 25, 2002